



NEXT
LOCK by Digilock®

range™

Installation Guide

Range Oval Front Unit (Keypad and RFID)
Range Narrow Front Unit (Keypad and RFID)
Range Standard Front Unit (Keypad and RFID)
Range Rear Unit (Latch and Bolt 5G)



4G Rear Units (Latch and Bolt)





Before Lock Installation.....3

Surface Mount Installation

For door thickness measuring between .16" - .91" (4 mm - 23 mm)

Required Components4

Installation.....5

For door thickness measuring between .01" - .16" (0.2mm - 4 mm)

Required Components7

Installation.....8

Door Preparation

Strike Plate Installation

Required Components10

Installation.....11

Door Mounting Holes Drill Instructions and Template

Drill Instructions12

Template for Standard & Vertical Body.....13

Metal Door Preparation

Compatibility Guide.....14

Removal of 3-hole Lock Plug.....14


Removal of Padlock Hasp.....15

The door must be prepared for lock installation.


1

Strike Plate


1. A strike plate must be installed.

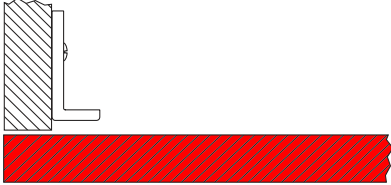

Angled Strike Plate



Security Strike Plate
Recommended for latch products



Double Door Strike Plate

2


Door Mounting Holes

The door must have door mounting holes.




1 - Legacy Rear Units


This installation guide is compatible for 4G Motorized Rear Units

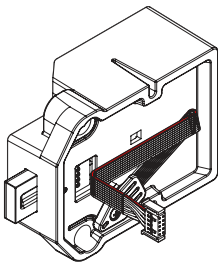


Deadbolt - Cable

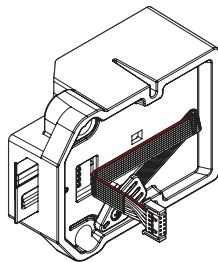

Deadlatch - Cable

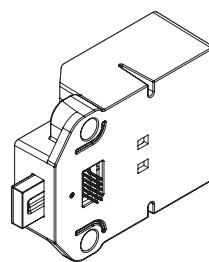

Deadbolt - Cable

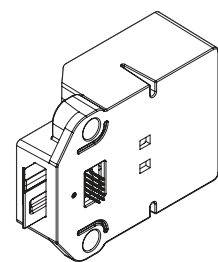


Deadlatch - Cable




For door thickness measuring between .16" - .91" (4 mm - 23 mm)

Required Components


Tab Text

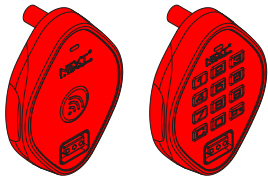

Oval Body
RFID and Keypad

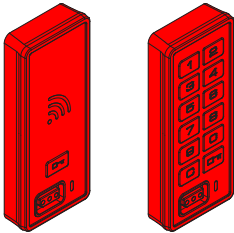


Narrow Body
RFID and Keypad

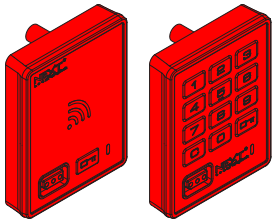


Standard Body
RFID and Keypad

1 - Rear Units

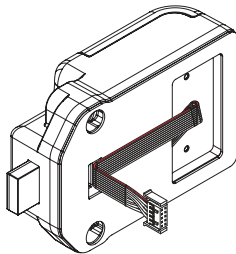


Deadbolt - Cable

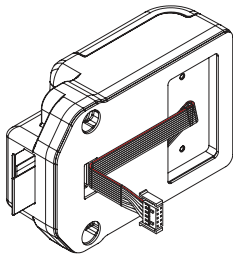

Deadlatch - Cable

2 - Phillips Head Screws

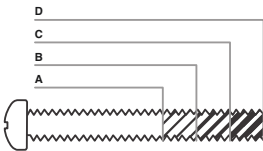


Screw Size	Length	Door Thickness	
		Min	Max
A	1" (25.400 mm)	.01" (.2 mm)	.16" (4 mm)
B	1 1/4" (31.750 mm)	.16" (4 mm)	.43" (11 mm)
C	1 1/2" (38.100 mm)	.43" (11 mm)	.67" (17 mm)
D	1 3/4" (44.450 mm)	.67" (17 mm)	.91" (23 mm)

2 - Split Lock Washers




1* - Phillips Head Screwdriver (#2)




*Not included

Installation


For illustration, a oval body keypad front unit with a bolt rear unit is used.

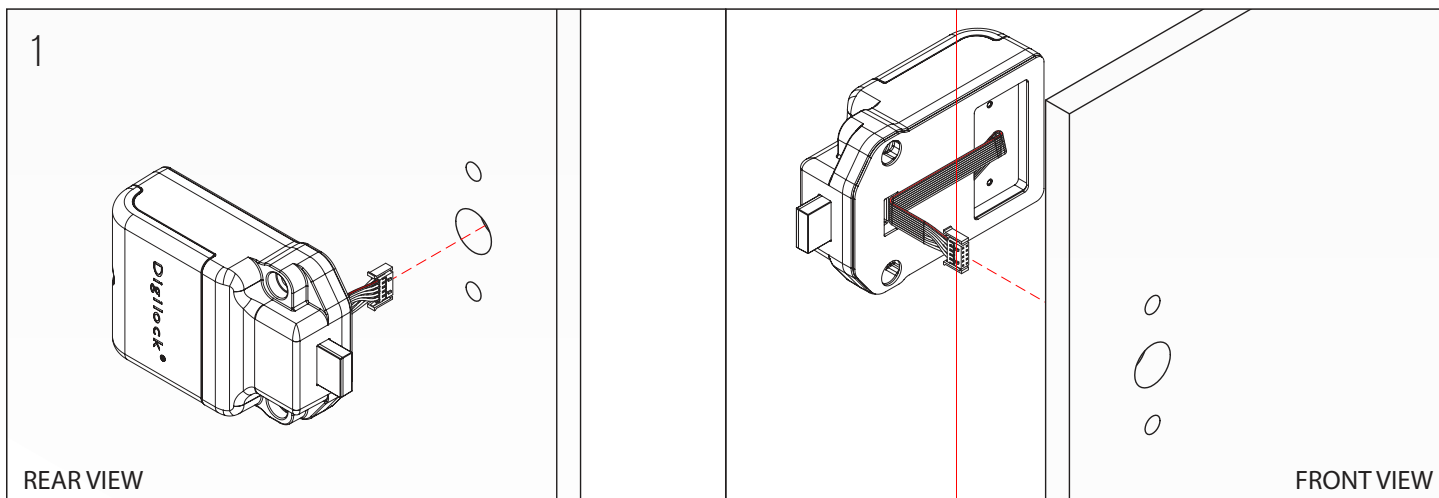


With the rear unit behind the door, extend the cable through the door's mounting hole.

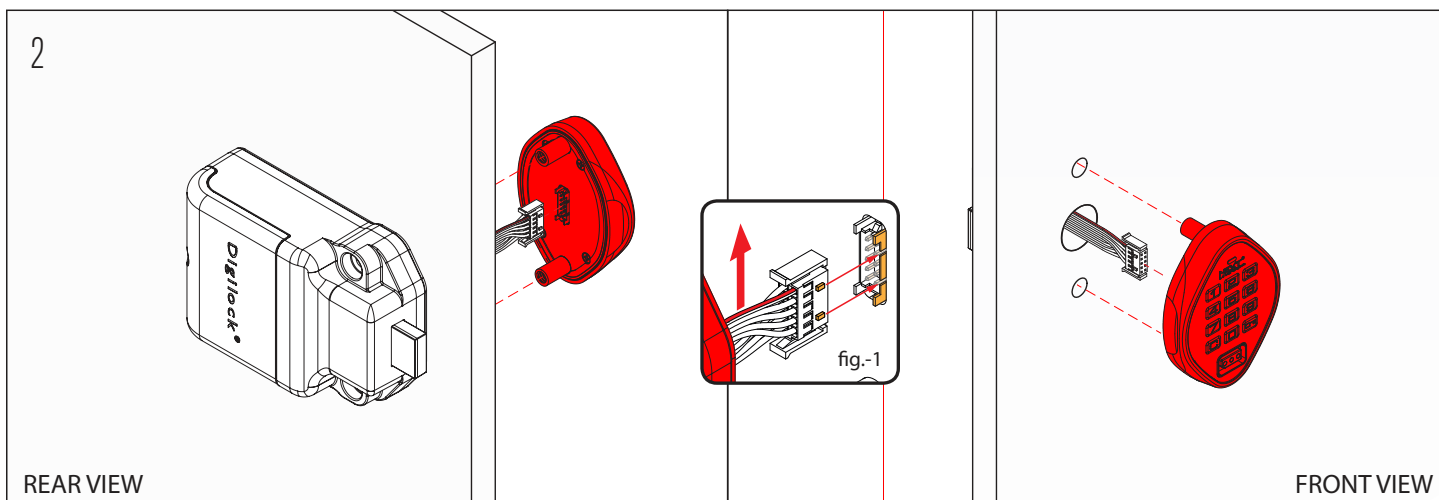


Orient the cable with the red wire position on the top of the ribbon (see fig-1). Attach the cable to the front unit using the corresponding channel guides to ensure the snap connector is properly secured. Once connected a triple beep indicates successful connection.

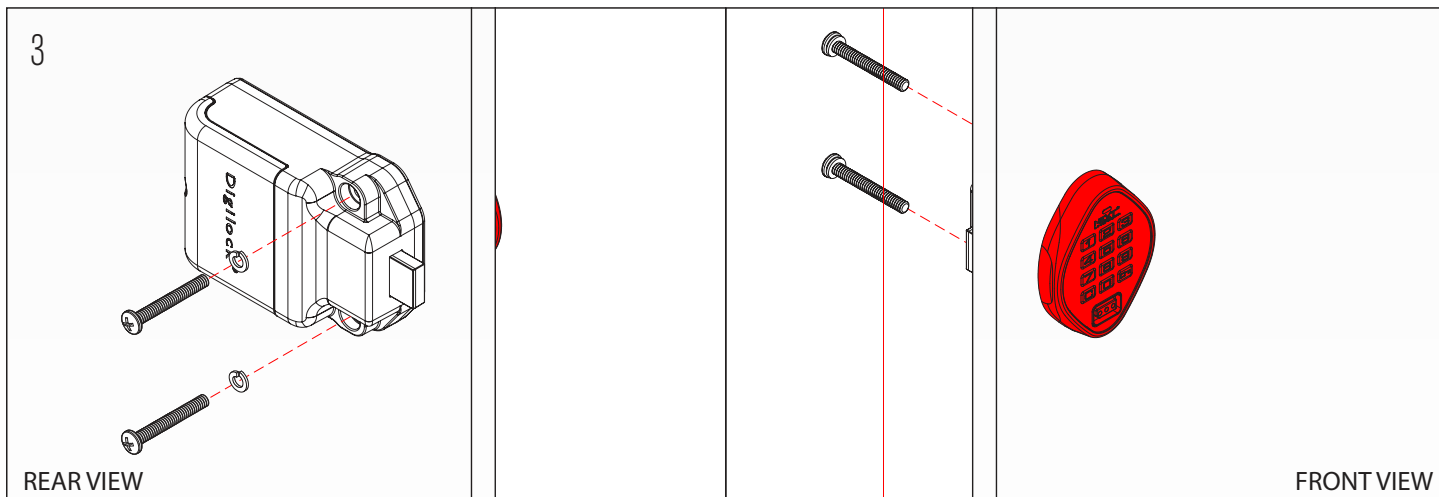


Hold the front and rear units against the door and secure with the mounting screws. Ensure the remaining cable is not pinched.

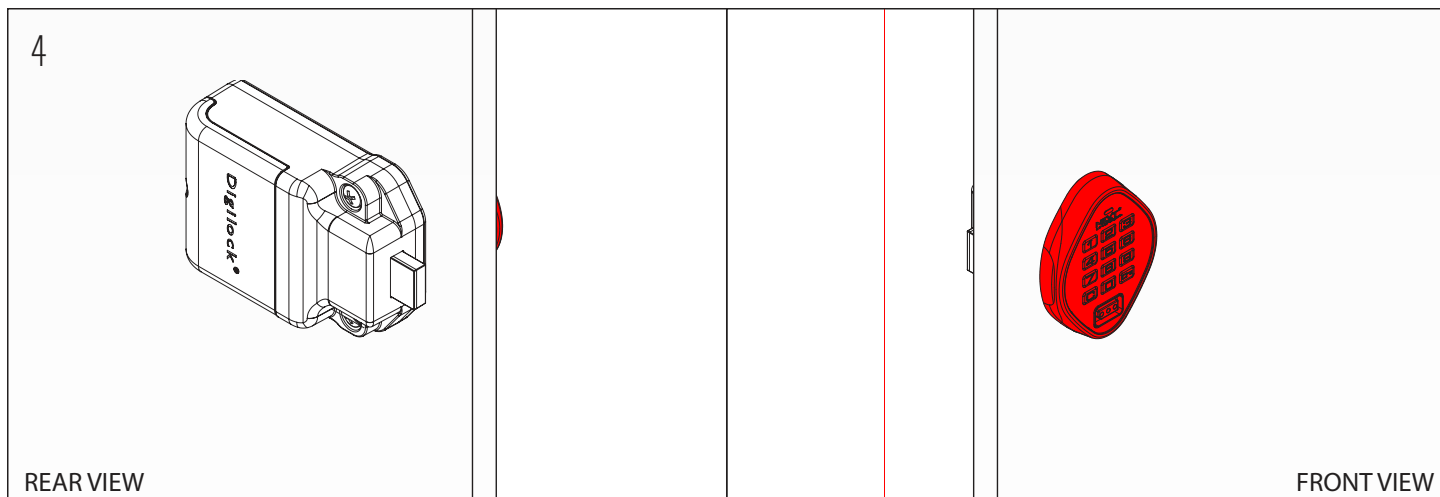


Test the lock while the door is open to ensure that the bolt or latch is operating properly.




+

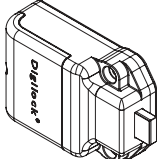







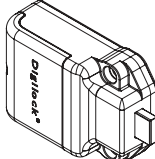+





For keypad locks with deadbolt rear units:


Press   to extend the bolt.

Press   again to retract the bolt.


For touch RFID locks with deadbolt rear units:


Press RFID  to extend the bolt.

Press RFID  again to retract the bolt.




+

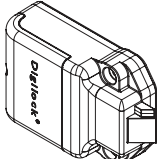





+

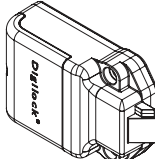


For keypad locks with deadlatch rear units:

Press   to retract the latch.

The latch will extend automatically.

For touch RFID locks with deadlatch rear units:

Press RFID  to retract the latch.

The latch will extend automatically.

Repeat test with the door closed.

If ten rapid beeps are heard, the strike plate or door alignment may need adjustment to allow the lock to operate properly.

If the door does not lock when the bolt/latch is extended, the strike plate or lock position may need adjustment.


For door thickness measuring between .01" - .16" (0.2 mm - 4 mm)

Required Components


Tab Text



Oval Body
RFID and Keypad

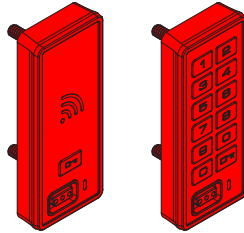


Narrow Body
RFID and Keypad

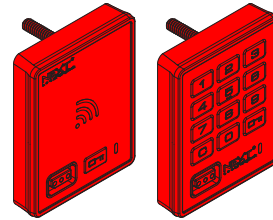


Standard Body
RFID and Keypad

1 - Rear Units

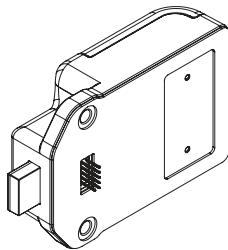


Deadbolt - Cable

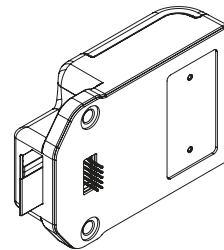


Deadlatch - Cable

2 - Locking Nuts

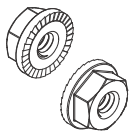


1* - 3/8" Nut Driver




*Not included

Installation

For illustration, a oval body keypad front unit with a bolt rear unit is used.

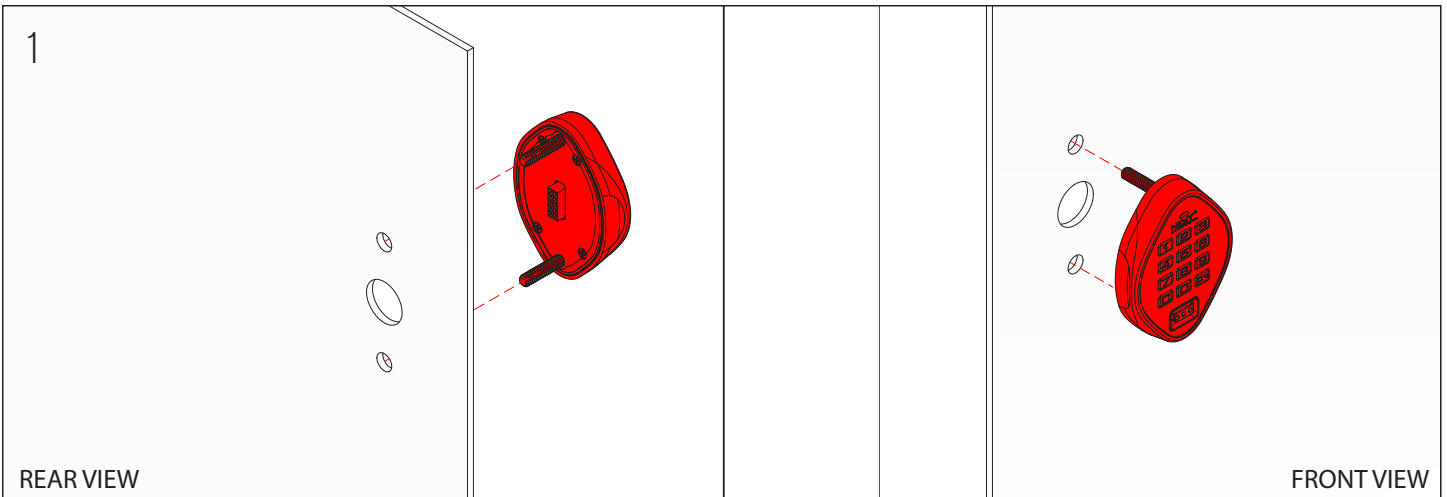


Insert the front unit screw posts through the door mounting holes.

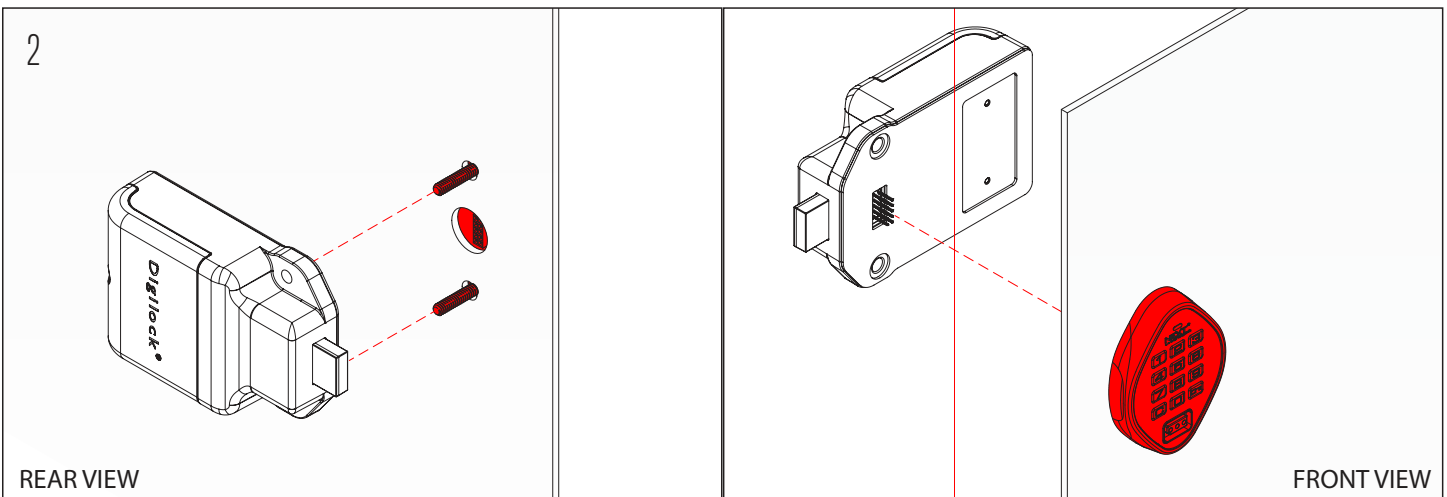


Hold the front unit against the front of the door. Use the rear unit mounting holes as a guide, then slide the front and rear units together. Make sure the connector pins align properly with the connector.

If properly connected, a triple beep will be heard and the LED will flash three times.

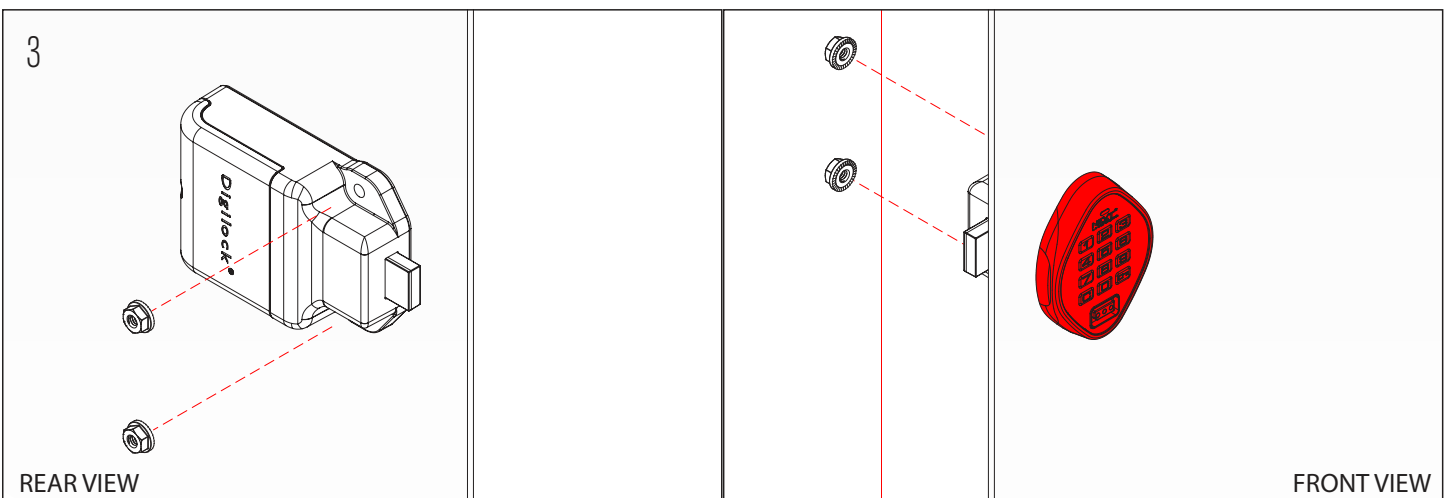


Insert the locking nuts on the screw posts and tighten using the ratchet/screw gun. Do not over tighten.

4

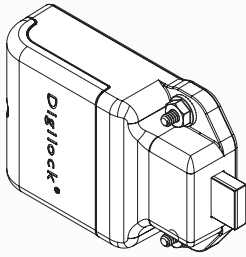

REAR VIEW

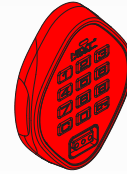


FRONT VIEW

Test the lock while the door is open to ensure that the bolt/latch is operating properly.



For keypad locks with deadbolt rear units:

Press to extend the bolt.
Press again to retract the bolt.

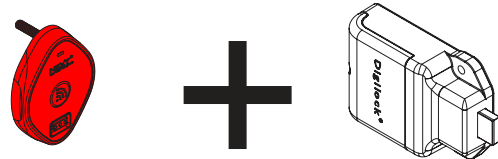

For touch RFID locks with deadbolt rear units:

Press RFID to extend the bolt.
Press RFID again to retract the bolt.



For keypad locks with deadlatch rear units:

Press to retract the latch.
The latch will extend automatically.



For touch RFID locks with deadlatch rear units:

Press RFID to retract the latch.
The latch will extend automatically.

Repeat test with the door closed.

If ten rapid beeps are heard, the strike plate or door alignment may need adjustment to allow the lock to operate properly.

If the door does not lock when the bolt/latch is extended, the strike plate or lock position may need adjustment.




Strike Plate Installation


Required Components

Strike Plate*


1. A strike plate must be installed.

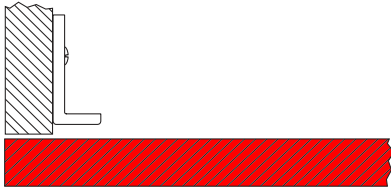

Angled Strike Plate




Security Strike Plate
Recommended for latch products




Double Door Strike Plate


1* - Phillips Head Screwdriver (#1)




1* - Pencil




Removable tape*

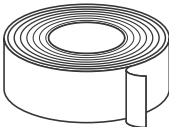


1* - Ruler




1* - Drill

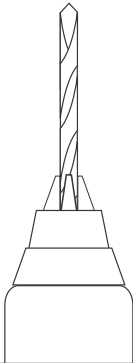


1* - 1/6" Drill bit



1* - 5/16" Drill bit




1* - 3/4" Drill bit




*Not included


Installation

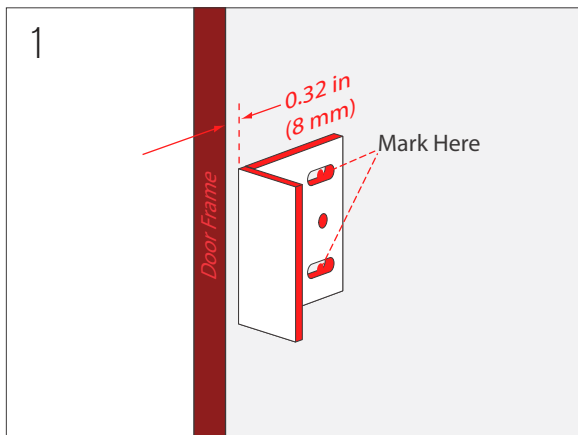


Position the strike plate on the door frame aligning it with the center of the lock's mounting holes.

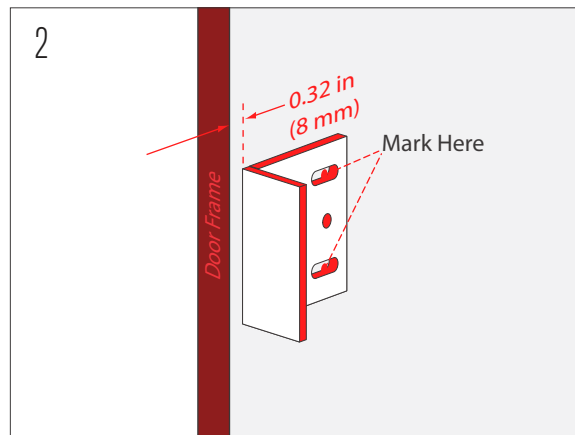


Allow .32" (8 mm) from door edge and mark the position of the adjustment slot holes.

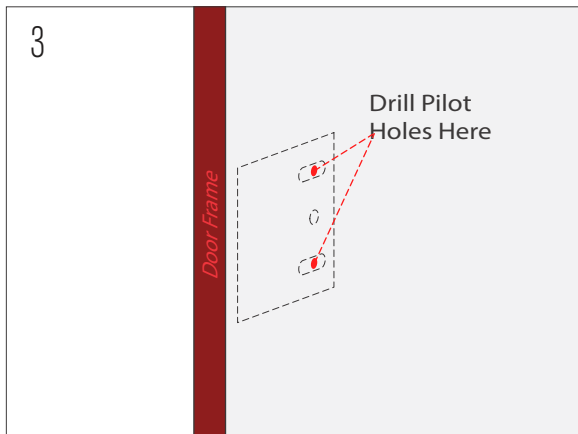


Drill 0.25" (6.35 mm) pilot holes using a 1/6" drill bit.

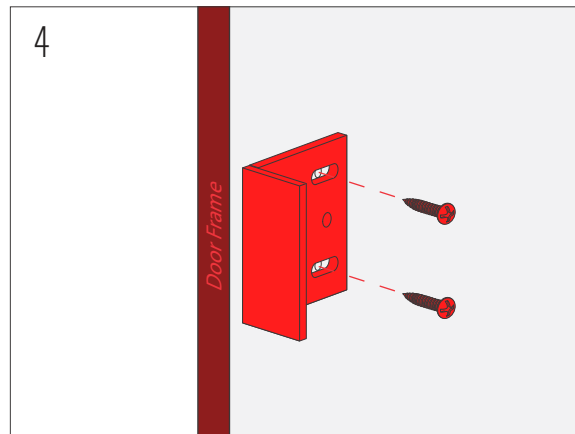

Position the strike plate and the self tapping screws into the adjustment slot holes. Do not tighten the screws.

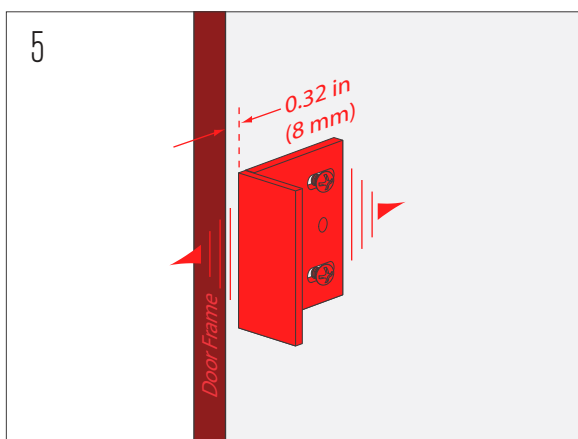


Adjust the strike plate to the proper position (.32" (8 mm) from the door edge) then tighten the self tapping screws.

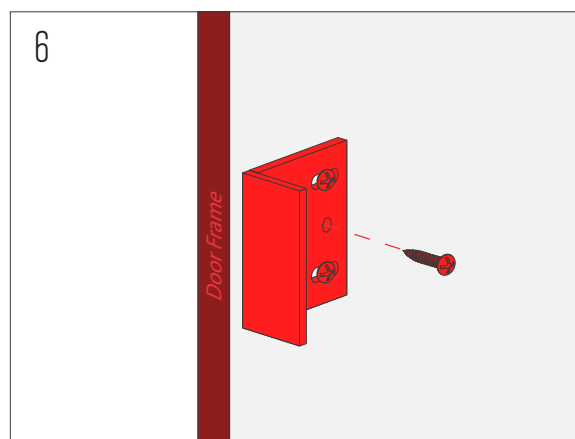


Position and tighten the remaining self tapping screw into the center hole.

Door Mounting Holes Drill Instruction and Template


Drill Instructions

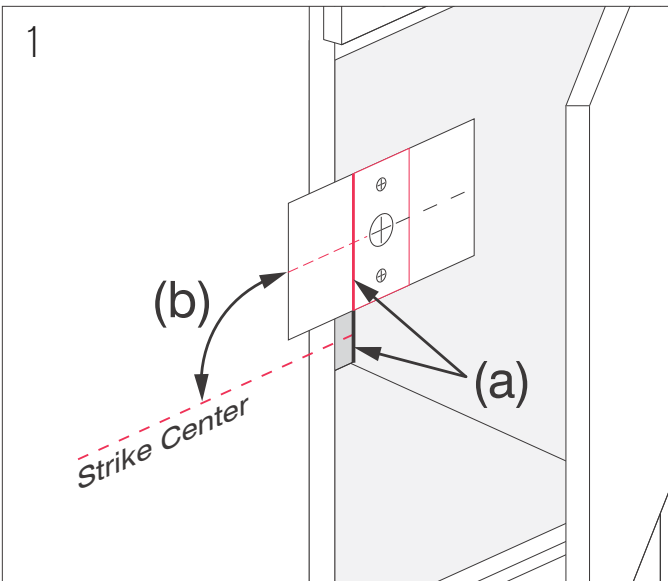


With the door open place the Template over the locker frame.
(a) Align the Edge of Strike Plate with the Strike Plate Marker.
(b) Center the Template to the center of the Strike Plate.
You may secure the Template with removable tape.

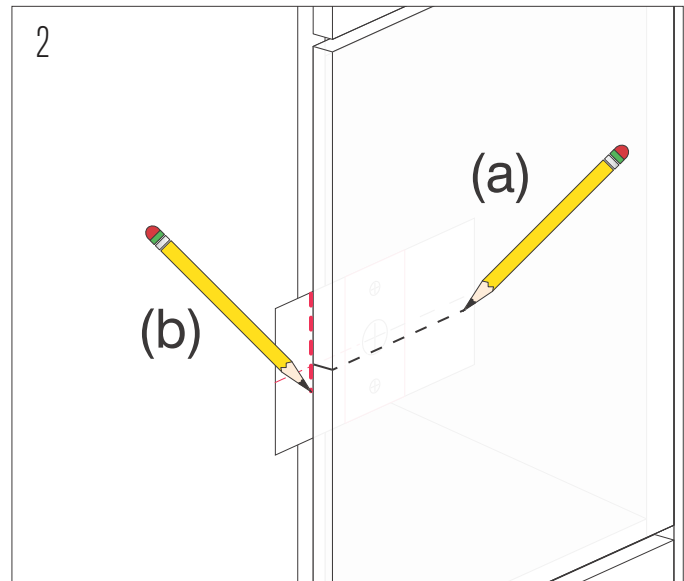

Close the door over the Template.
(a) Mark the door edge at the Template Center Line.
(b) Mark the Template with the edge of the door.

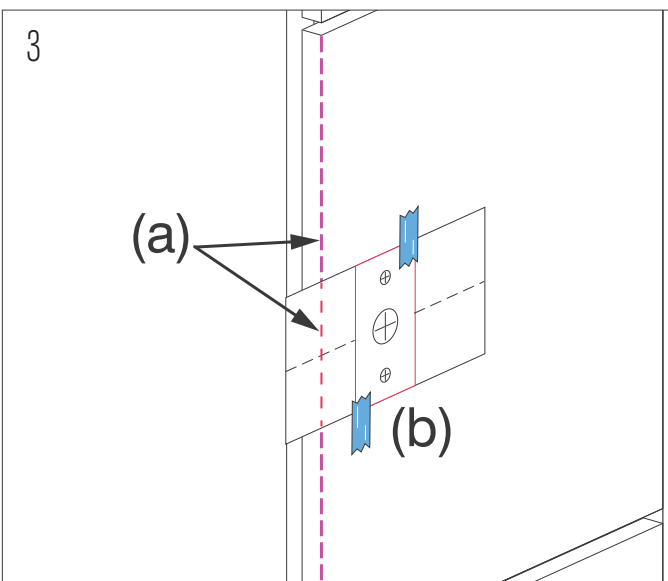

Place the Template on the front of the door.
(a) Align the drawn mark on the Template with the door edge.
(b) Center the Template with the mark on the door.
Secure the Template with removable tape.

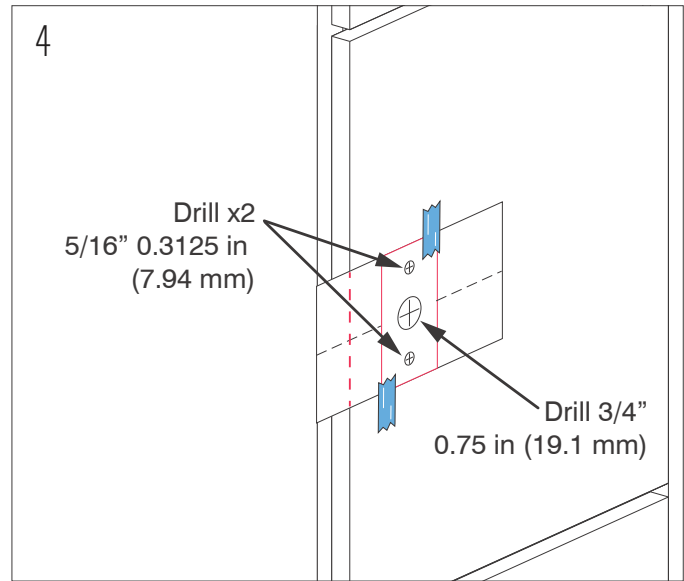


Mark the center points of the door mounting holes on the front of the door. Drill the holes according to the specified dimensions.

Template for Door Mounting Holes

Templates may not print to scale. Check all measurements before proceeding.





⚠ Before printing, turn off auto scaling in printer setup and print at 100% ⚠

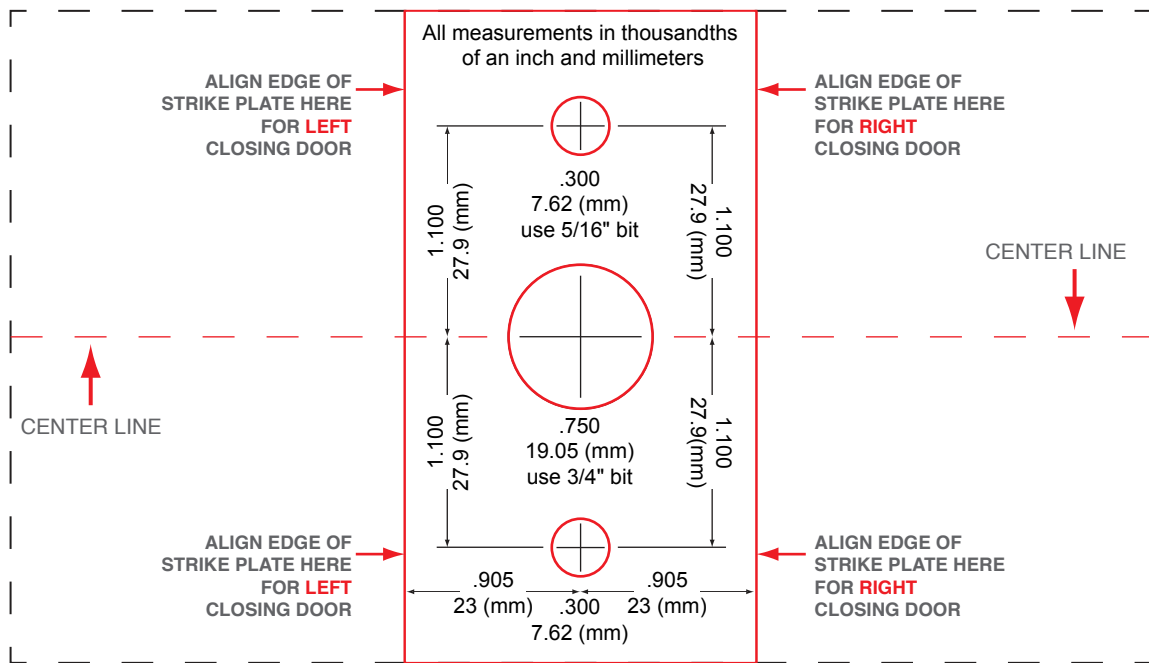

Metal Door Preparation


Compatibility Guide

Digilock is compatible with a majority of 3-hole configuration, latch, and handle door types. Some doors may require modification to clear obstructions.

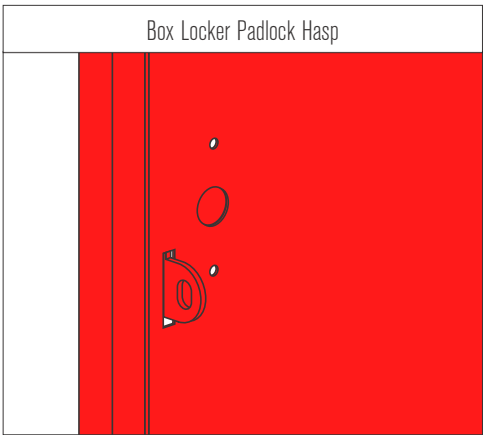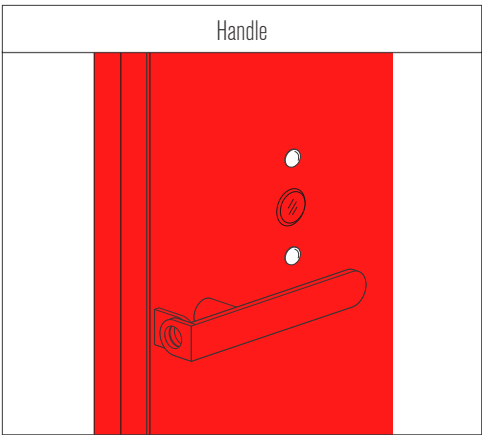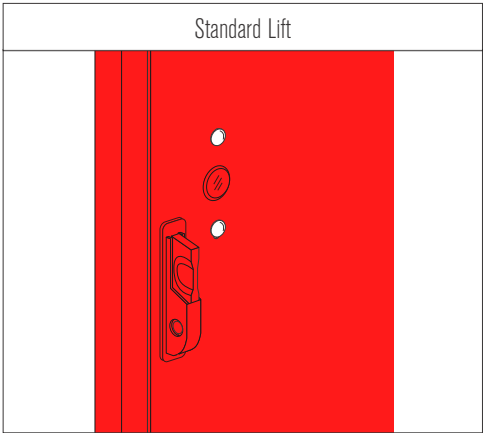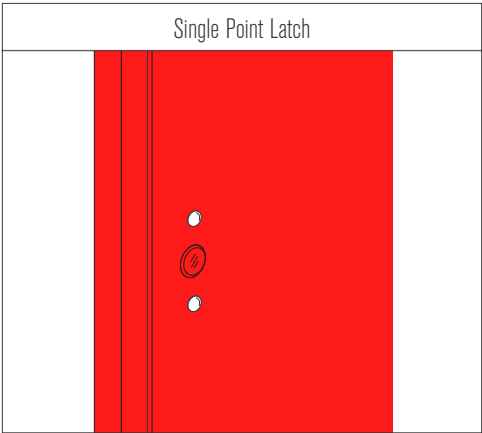


Removal of 3-hole Lock Plug

Remove any obstructions to the door mounting holes.

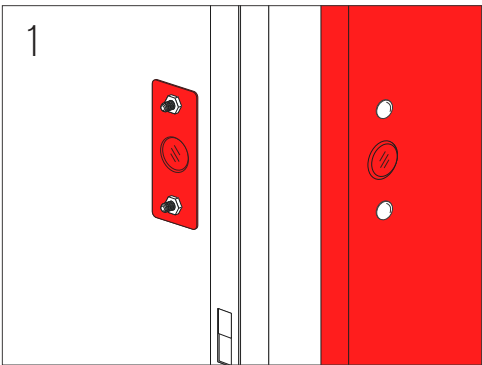


Rear View of Locker Door with Lock Plug

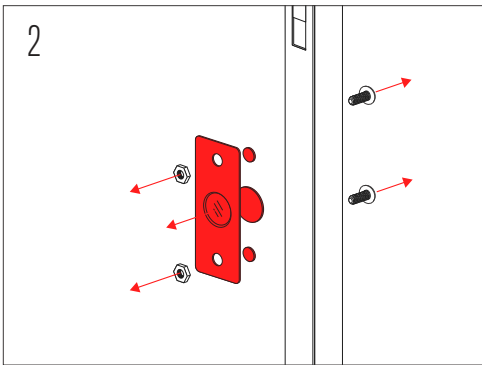


Removal of Padlock Hasp

The padlock hasp must be removed

1* - Handheld Grinder or Hack Saw

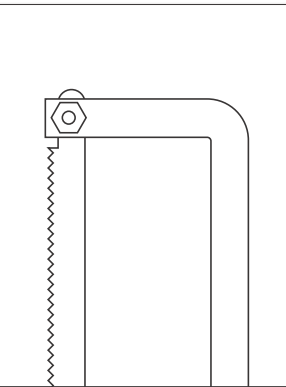


1* - Metal File

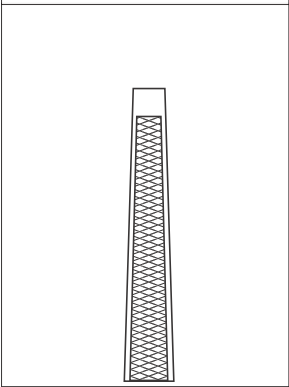


*Not included

1

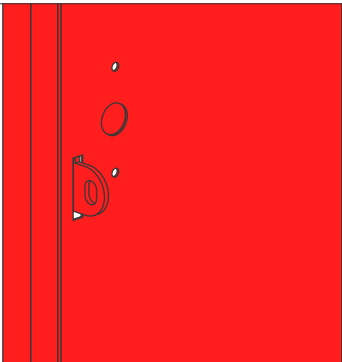


Close the door and make sure that nothing is protruding above the surface of the door.

2

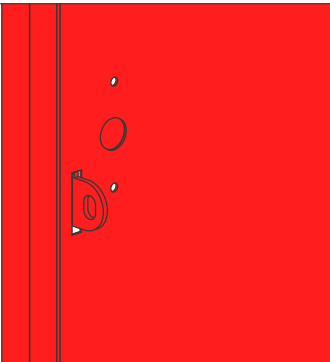


Close the door and mark the area to cut the padlock hasp.

3

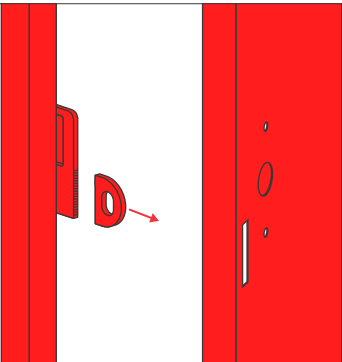

Open the door then cut the padlock hasp on the marked cut-line.

4

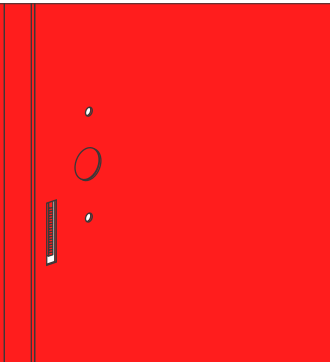

Smooth out rough or sharp edges.

